



## WALL MOUNTING INSTALLATION GUIDE SINGLE DISPENSER

*Congratulations! The EcoEclipse dispenser you purchased is a time-tested product that's been used successfully in bathrooms of hundreds of properties around the world. Now it's time to get your dispenser installed properly.*

### BEFORE INSTALLING

- Read instructions thoroughly.
- Using the bottle release tool, remove the retainer clip that holds the bottle to the unit. Be sure to remove the bottle from the bracket.
- After installation, please wait a minimum of 24 hours before inserting a filled bottle into the bracket.
- Don't worry. Hundreds of properties have successfully installed our EcoEclipse dispenser.

### Step 1: Apply Double Stick Tape

- Apply double stick tape to back of bracket, with blue plastic covering facing out. **\*Do not remove the blue plastic covering.**
- Allow tape to cure on back of bracket for 24 hours before installing.



### Step 2: Identify Your Installation Location for Wall Mount


- Position your dispenser in its desired location & mark the location with tape or a dry erase marker.
- Make sure the dispenser's location is accessible and won't interfere with any bathroom fixtures.

## SINGLE DISPENSER - VANITY AREA WITH WALL MOUNT



### Step 3: Readyng the Adhesive & Mounting Surface (Shower & Vanity)

- Ensure the surface is clean & dry. Grime & soap scum will decrease the effectiveness of the adhesive.
- Use rubbing alcohol or window cleaning solution for final preparation and wait for surface to fully dry before applying bracket with the adhesive back to the surface.
- Remove blue tape carefully as the tape can be very sticky. This will expose the adhesive surface.

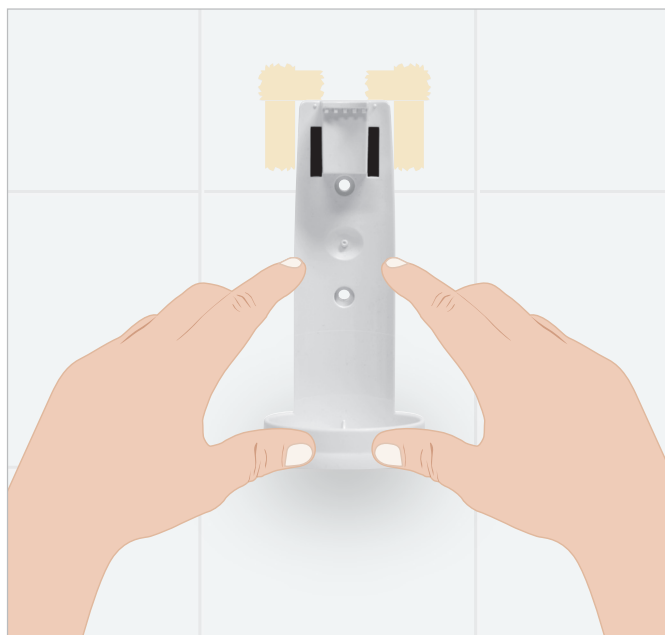

### Step 4: Adhering the Dispenser

- Hold the unit with both hands (see image A).
- Align with the positioning marks you made with masking tape or dry erase marker (see image A).
- Push dispenser hard against the wall or counter and hold for 30 seconds (see image A).
- If you decide to add screws, we recommend #8, 1½ inch stainless steel screws with an anchor.
- Seal around the outside edge of the bracket with adhesive caulk (see image B).

### Step 5: Take a Break

- Wait 24 hours for the adhesive to set before adding a filled bottle.



### Step 6: Loading Your Dispenser

- Use bottle release tool to release the locking clamp. See image B. Insert your filled bottle.
- Bottle will go in easier if you insert it bottom first. See image C.
- Snap the tamper-resistant locking clamp back into place over the filled bottle. See image C.



### YOUR FINISHED WALL MOUNTED SINGLE DISPENSERS

[View Our Bottle Replacement Video](#)

### YOUR PARTNER FOR PERSONAL CARE SOLUTIONS

..... Follow Us    @readycare .....

ReadyCare is a leading provider of personal care amenities, supplies and private label solutions to world-class hotels, spas, health clubs and golf clubs. For over 25 years, Denver-based ReadyCare has helped thousands of properties deliver great member and guest experiences by ensuring their personal care offering aligns with their brand and their customers.

(800) 477-4283 • [info@readycare.com](mailto:info@readycare.com) • [www.readycare.com](http://www.readycare.com)

4-18-24



SEE MORE!